


## Villy 4000 E

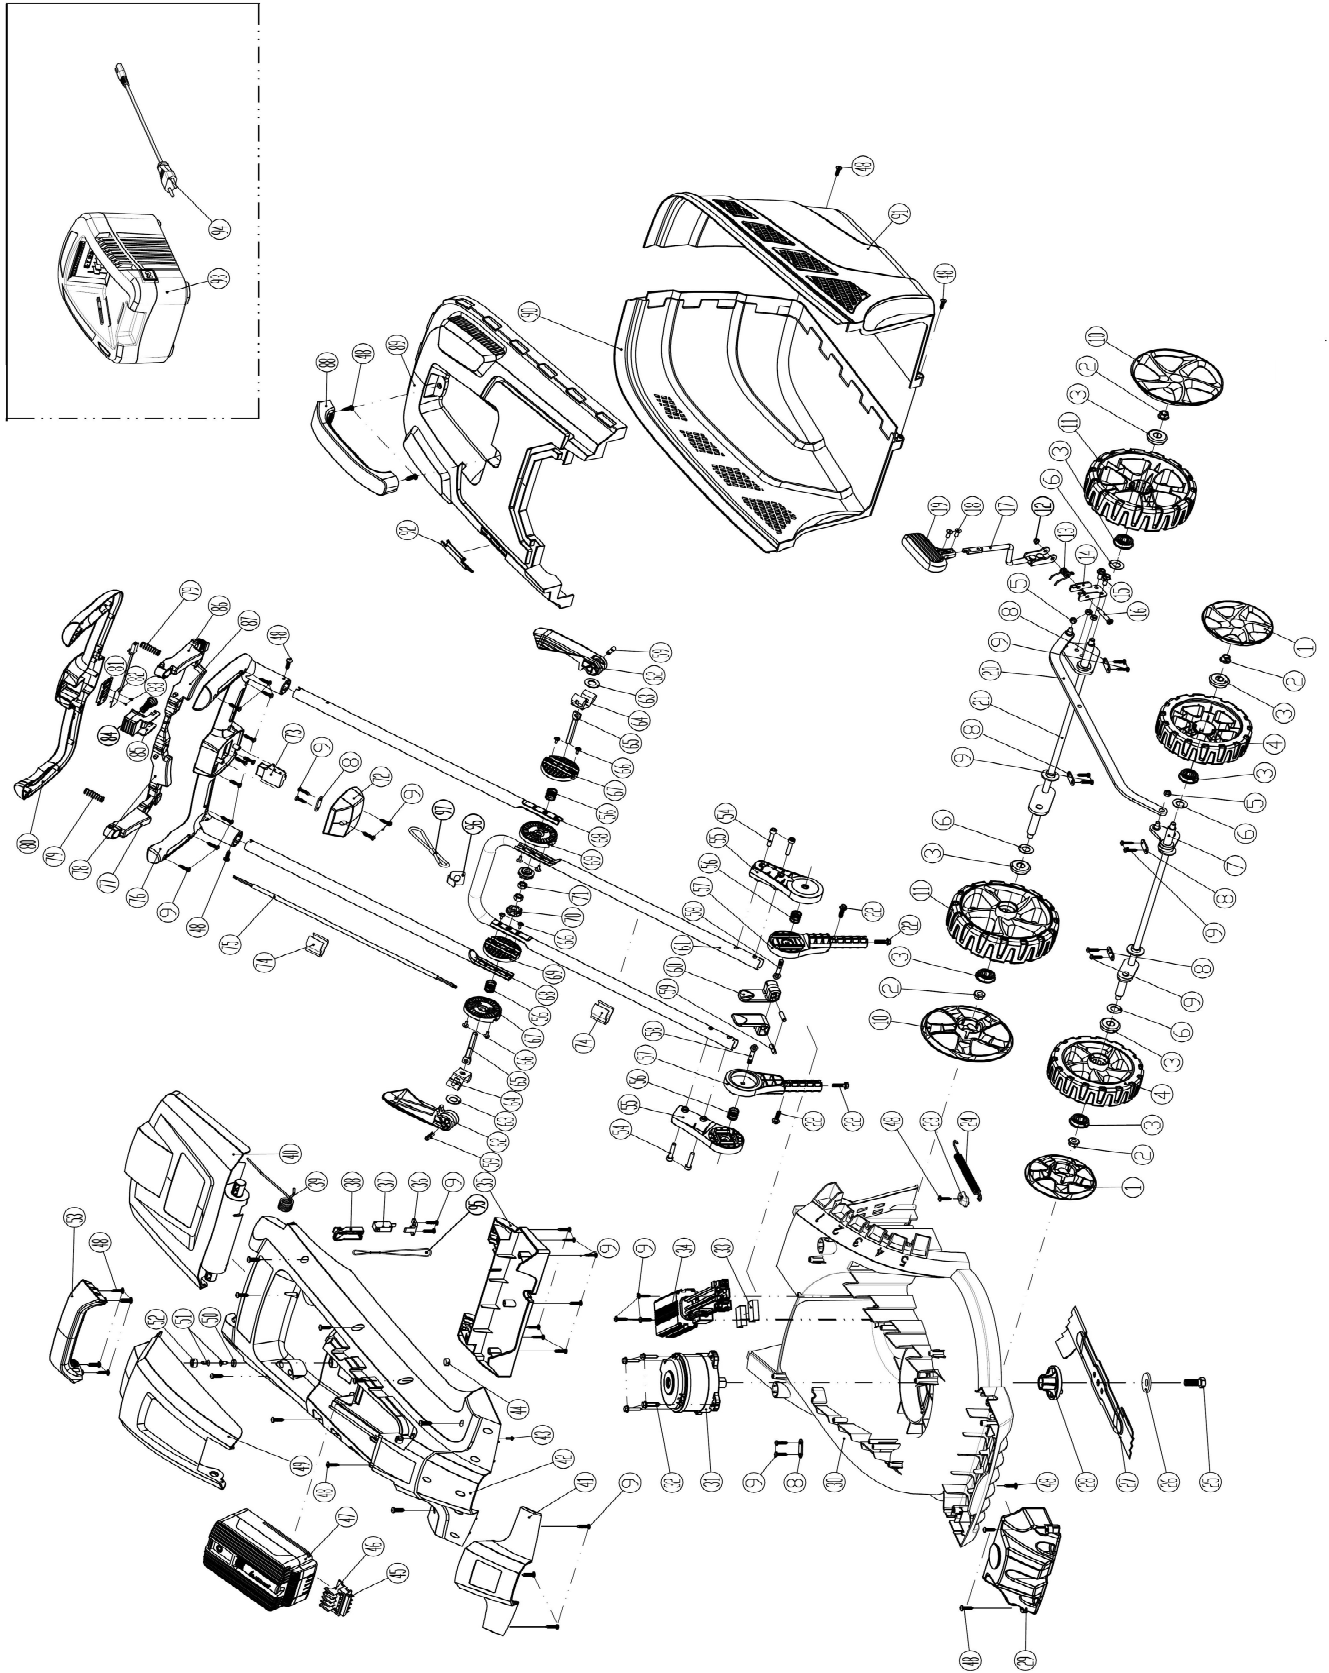

UNIT



# EXPLODED PARTS LIST

Year: 2017

Page(s): 2/3

## Villy 4000 E

No	Code	Name	Qty	No	Code	Name	Qty
1	049422	Wheel cover	2	49		Transparent cover	1
2		Self locking nut	4	50		Magnet	1
3	049423	Nylon sleeve	8	51		Tapping screw	2
4	047662	Wheel assembly	2	52		Absorbing block	1
5		Self tapping nut	4	53	049438	Grip	1
6		Washer	4	54		Screw	4
7	049424	front wheel axle	1	55		Upper folding tooth	2
8		bracket	6	56		Tooth spring	4
9		Self tapping screw	39	57		Lower folding tooth	2
10	049425	Wheel cover	2	58		Nut	2
11	047663	Wheel assembly	2	59		Flexible washer	4
12		Self tapping nut	1	60		Adjustable Handle	2
13	049426	torsion spring	1	61	049439	Lower handrail	1
14		Handle bracket	1	62		Quick Fix Handle	2
15		hexagon bolt	2	63		Washer	2
16		M5 screw	1	64		Hanging Hook	2
17	049427	Handle	1	65		Pulling rod of quick fix handle	2
18		screw	2	66		Tapping screw	8
19	049428	Adjustment handle	1	67		Outer tooth	2
20	049429	connecting rod	1	68	049440	Upper Handrail	2
21	049430	rear wheel axle	1	69		Inner tooth	2
22		hexagon bolt	4	70		Nut	2
23		Washer	1	71		Nut	2
24	049431	Pull spring	1	72		Rear Cover of dash board	1
25	047661	hexagon bolt	1	73	049441	Trigger Switch	1
26		washer	1	74		Fastener	2
27	047659	Blade	1	75		Cable	1
28	047660	Blade Adapter	1	76	049442	Lower Cover of Board Board	1
29		Balancing kettle	1	77		Right Landscape Button	1
30	049432	Deck	1	78		Right Portrait Button	1
31	049433	Electrical motor	1	79	049443	Resetting Spring	2
32		Tapping screw	4	80	049444	Dash Board	1
33		Rubber washer	2	81		Electricity Showing Board	1
34	049434	controller	1	82		Electricity Showing Board Assy	1
35		Rear cover	1	83		Tapping screw	2
36		plate pinch	1	84	049445	Button Spring	1
37	049435	micro switch	1	85	049446	Button	1
38	050728	Isolator key	1	86		Left Portrait Button	1
39	049436	torsion spring	1	87		Left Landscape Button	1
40	049437	Rear grass box cover	1	88	049447	Lifting Handle of grass catcher	1
41		Decoration cover	1	89	049448	Rear Discharge Cover	1
42		Upper cover	1	90	049449	Right Frame of Grass Catcher	1
43		Self tapping screw	1	91	049450	Left Frame of Grass Catcher	1
44		Dust proof cover	1	92		Collection Indicator	1
45		Insert seat	1	93		Charger	1
46		Insert plate	4	94		Cable	1
47		Battery pack	1	95		Key Lanyard	1
48		Tapping screw	23	96		Hook	1

**Unit**

